

Lufft I-BOX Schnellstart

Auspacken
Lieferumfang
Lufft-I-BOX
Ethernet-Kabel 1m
Schnellstart-Anleitung

1




4

Einbauen
Hutschienen-Montage
Temperatur bei
angereicherter Montage: 0...65°C
bei nicht-angereicherter Montage: 0...70°C
Luftfeuchte: 0...90% rel. Feuchte,
nicht kondensierend

Anschließen
Stromversorgung
24-48V oder Ethernet/PoE
Auf korrekte Polung achten!

2

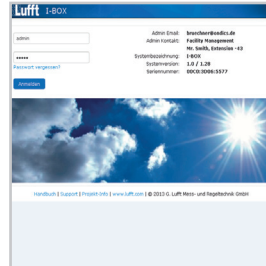


5

Messung einrichten
OPUS20-Gerät im Netz finden mit
SYS->Opus Finder, IP-Adresse vergeben
OPUS20-Kanäle auswählen

Netzwerk
Länge Ethernet-Kabel max. 100m
10/100 BaseT
Auto-MDI(X)-Schnittstelle:
Anschluss an PC ohne
Switch/Hub möglich

3

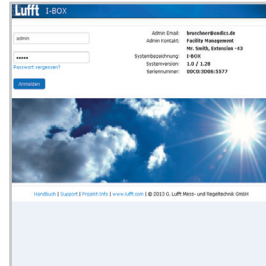

mit IN->OPUS20-1
Kanälüberwachung einstellen
mit SYS->Email Alarm
Kanalarfrage über Schnittstelle
mit OUT->JSON-API

System-Konfiguration
Erster Login
IP-Adresse:
190.107.233.110
Benutzername: **admin**
Kennwort: **admin**
Aufruf mit <http://190.107.233.110>
Nach Login startet der Setup-Assistent
Ein ausführliches Handbuch ist auf der Lufft I-BOX
und kann in der Fußzeile herunter geladen werden


3



6

Lufft I-BOX APP-Store
Erweitern Sie den Leistungsumfang
der Lufft I-BOX mit Apps aus dem
App Store nach Bedarf:
 
<http://lufft-i-box.com/appstore>



Lufft I-BOX Quick start manual

Unpacking
Content
Lufft-I-BOX
Ethernet cable 1m
quick start manual

1



Connecting
Power Supply
24-48V or Ethernet/PoE
please check correct polarity

2

Network
length of Ethernet cable max 100 meters
10/100 BaseT
Auto-MDI(X)-Interface:
connection with PC without
Switch/Hub possible



System Configuration
First Login:
IP-address:
190.107.233.110
user name: **admin**
password: **admin**
use <http://190.107.233.110>
setup assistant starts automatically
comprehensive digital manual on Lufft I-Box
with download option

3



4


Assemble
DIN-rail mounting
operating temperature: 0 .. 65°C
relative humidity: 0.. 90% rh.
non-condensing



5

Set-up measurement
find OPUS20 loggers in the network:
SYS->Opus Finder, assign IP addresses
Select OPUS20 channels:

IN->OPUS20-1
set channel thresholds:
SYS->email alert
data request via interface:
OUT> JSON-API

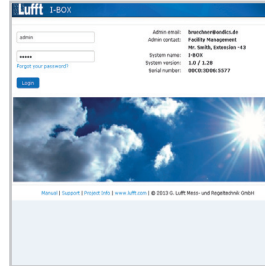

6

Lufft I-BOX APP-Store
Extend your OPUS20
functions using
additional Apps from Lufft:
<http://lufft-i-box.com/appstore>

Available on the
Lufft I-BOX
App-Store

