



User Manual

Food / Hygiene Thermometer PCE-FOT 10



User manuals in various languages (français, italiano, español, português, nederlands, türk, polski, русский, 中文) can be found by using our product search on: www.pce-instruments.com

Last change: 26 July 2018
v1.0



Contents

| | | |
|-----------|--|----------|
| 1 | Safety notes | 1 |
| 2 | Technical specifications | 2 |
| 3 | Interpretation of the measured values | 2 |
| 4 | Device description | 3 |
| 5 | Measurement | 4 |
| 6 | Settings / configuration mode | 4 |
| 7 | Advanced alarm settings | 5 |
| 8 | Calibration | 5 |
| 9 | Contact | 6 |
| 10 | Disposal | 6 |

1 Safety notes

Please read this manual carefully and completely before you use the device for the first time. The device may only be used by qualified personnel and repaired by PCE Instruments personnel. Damage or injuries caused by non-observance of the manual are excluded from our liability and not covered by our warranty.

- The device must only be used as described in this instruction manual. If used otherwise, this can cause dangerous situations for the user and damage to the meter.
- The instrument may only be used if the environmental conditions (temperature, relative humidity, ...) are within the ranges stated in the technical specifications. Do not expose the device to extreme temperatures, direct sunlight, extreme humidity or moisture. The device is intended for indoor use.
- Before the measurement, the device should have stabilised at ambient temperature, which is important when moving from cold to warm rooms and vice versa.
- Do not expose the device to shocks or strong vibrations.
- The case should only be opened by qualified PCE Instruments personnel.
- Before making a measurement, make sure the device is entirely closed.
- Never use the instrument when your hands are wet.
- You must not make any technical changes to the device.
- The appliance should be cleaned with a damp cloth after each use. Use only pH-neutral cleaner, no abrasives or solvents.
- The device must only be used with accessories from PCE Instruments or equivalent.
- When the frying oil tester is not used for a longer period of time, remove the batteries.
- Do not store the meter together with any chemicals.
- Before each use, inspect the case for visible damage. If any damage is visible, do not use the device.
- Wear your personal protective equipment during each measurement to avoid injury. This also applies to other people near the measuring location as oil splashes can cause serious injury to human skin and eyes.
- To avoid burns, never touch the sensor or the metal shaft directly after the measurement as these parts can become very hot when they are immersed into hot oil.
- Remove the oil quality meter from the oil when you leave the place.
- Do not use the instrument in explosive atmospheres. Also avoid proximity to explosive, easily flammable or chemical substances when the sensor is hot.
- Only use the device in systems that are electrically tested on a regular basis. Never connect the conductive metal parts of the meter with a source of voltage. Inspect the system visually before each measurement. If there are any signs of damage, do not carry out any measurements until the problem has been resolved.
- The measurement range as stated in the specifications must not be exceeded under any circumstances.
- Non-observance of the safety notes can cause damage to the device and injuries to the user.

We do not assume liability for printing errors or any other mistakes in this manual.

We expressly point to our general guarantee terms which can be found in our general terms of business.

If you have any questions please contact PCE Instruments. The contact details can be found at the end of this manual.



2 Technical specifications


| Temperature | |
|-------------------------------|---|
| Temperature measurement range | +30 ... +200 °C |
| Temperature accuracy | ±1.5 °C |
| Temperature resolution | 0.5 °C |
| PC value | |
| PC measurement range | 0.5 ... 40 % polar fractions |
| PC accuracy | ±3 % (at +30 ... +90 °C)* |
| PC resolution | 0.1 % |
| General | |
| Measurable materials | olive oil, palm oil, rapeseed oil, peanut oil, soybean oil, sesame oil, further vegetable oils or animal fats |
| Power supply | 2 x 1.5 V AAA battery |
| Battery life | approx. 500 measurements / 25 h continuous operation |
| Temperature sensor | PTC sensor |
| Oil sensor | capacitive sensor |
| Operating temperature | 0 ... +50 °C |
| Storage temperature | -20 ... +70 °C |
| Display | LCD, 3 digits |
| Dimensions (W x D x H) | 55 x 350 x 25 mm without probe |
| Weight | 185 g |
| Case material | ABS |
| Protection class | IP65 |

* As different fats and oils have different characteristics, the measured PC values can deviate by a certain percentage, depending on the type of oil/fat.

3 Interpretation of the measured values

| | |
|--|---------------------|
| Oil is new and good to use (LED flashes in green) | 0 ... 18.5 % |
| Oil quality classified as critical (LED flashes in blue). It is recommended to renew the oil partly or completely. | 19 ... 24 % |
| The oil in the fryer should no longer be used. The set threshold value (default setting: 24 %) has been exceeded and the LED flashes in red. The oil must be exchanged completely. | >24 % |

4 Device description

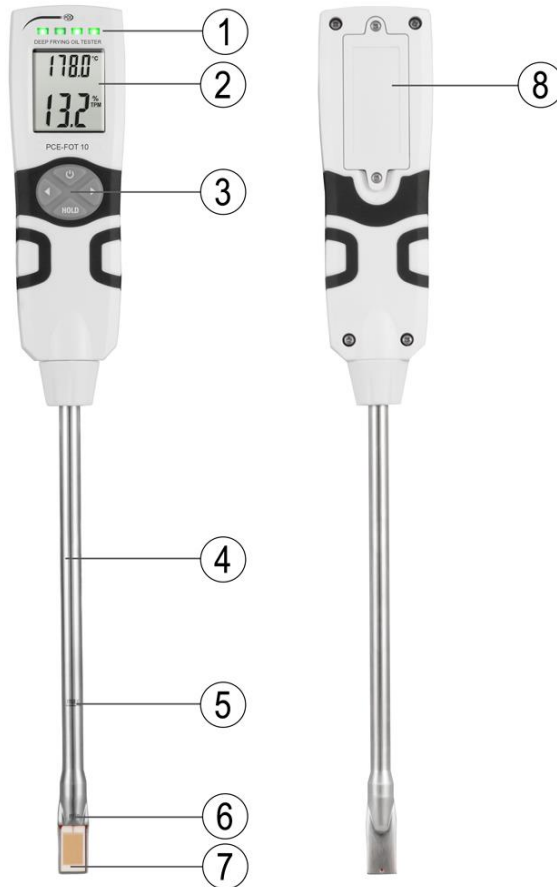

- 1) Alarm LEDs
- 2) Display
- 3) Keys:
 - On / off key
 - Arrow keys
 - HOLD key
- 4) Metal shaft
- 5) Line: max. immersion depth
- 6) Line: min. immersion depth
- 7) Sensor
- 8) Battery compartment cover

5 Measurement

1. Press and release the on / off key to switch on the device.
2. The temperature display will show "Lo".
3. The PC display will show "--".
4. Insert the sensor into the hot oil so that the oil level is between the minimum and maximum lines on the metal shaft.
5. If you want to freeze the measured value in the display, press the HOLD key.
6. Press the HOLD again to deactivate the HOLD function.
7. When the temperature indication flashes and shows "HI", the oil/fat is too hot and exceeds the upper end of the measurement range of 200 °C.
8. When the temperature indication flashes and shows "Lo", the oil/fat is too cold and is below the lower end of the measurement range of 30 °C.
9. When the PC indication flashes and shows "Lo," the oil/fat used is not suitable to be tested with the PCE-FOT 10.

Important notes to achieve the most accurate results

- During the measurement, there should not be any fried food in the oil/fat. After taking out the fried items, wait at least 5 minutes before making a measurement.
- If you would like to measure in an induction cooker, switch it off as its electromagnetic field can falsify the result.
- Stir the oil/fat briefly with the device to ensure an even temperature.
- Avoid direct contact with metal objects such as cooking pots or frying baskets as this can influence the measurement result. Minimum distance: 1 cm.
- Replace the oil/fat when a PC value of 24 % is reached. Different countries have different threshold values to stick to. It is recommended to replace the oil/grease before reaching the threshold value.

6 Settings / configuration mode

Activate the configuration mode by pressing the HOLD key and the arrow left key at the same time. Now you can navigate through the submenus, make the desired settings and confirm these by pressing the HOLD key. The next menu will open automatically.

Set temperature unit

Switch on the device and press the HOLD key and the arrow left key simultaneously for approx. 3 seconds. °C or °F will appear in the display.

1. Use the arrow keys to set the temperature unit (°C/°F).
2. Confirm the selected temperature unit by pressing the HOLD key to confirm.

Switch on / off audible alarm (ALA)

3. Use the arrow keys to switch on / off the audible alarm (ALA).
4. Press the HOLD key to confirm.

Switch on / off Auto Power Off function (OFF)

5. Press the arrow keys to switch on / off the Auto Power Off function.
6. Confirm your selection with the HOLD key.

Switch on / off alarm LED

7. Use the arrow keys to turn on / off the LEDs.
8. Press the HOLD key to confirm.

Switch on / off calibration mode (CAL)

9. Press the arrow keys to switch on / off calibration mode.
10. Press the HOLD key to confirm.

Reset device to factory settings (RST)

11. Use the arrow keys to reset the device to its factory settings (on).
12. Press the HOLD key to save and exit.

Switch the background lighting (BL) on or off

13. Press the arrow keys to turn on / off the backlight.
14. Press the HOLD key to save and exit.

To leave configuration mode, press the on / off key.

7 Advanced alarm settings

Switch on PC alarm (High)

1. Switch on the device and hold down the arrow left key for approx. 3 seconds until the LEDs turn red.
2. Use the arrow keys to set the alarm value.
3. Save the setting by pressing the HOLD key or press the on / off key to return to measurement mode without saving.

Switch on PC alarm (Low)

1. Switch on the device and hold down the arrow right key for approx. 3 seconds until the LEDs turn green.
2. Use the arrow keys to set the alarm value.
3. Save the setting by pressing the HOLD key or press the on / off key to return to measurement mode without saving.

8 Calibration

1. Use a reference oil with a known PC value for calibration. Heat the oil to 50 °C.
2. Enter calibration mode as described above. "CAL" will be displayed. Immerse the sensor into the calibration oil. Make sure the oil is between the Min/Max lines on the sensor shaft.
3. When the reading has stabilised, press the arrow keys to adjust the reading in increments of 0.5 %.
4. When the displayed value matches the reference value, press the HOLD key to save the value.

You can reset your calibration to factory settings by opening the menu item factory settings (RST) via the configuration mode as described under Settings and then pressing the arrow right key and the HOLD key.



9 Contact

If you have any questions, suggestions or technical problems, please do not hesitate to contact us. You will find the relevant contact information at the end of this user manual.

10 Disposal

For the disposal of batteries in the EU, the 2006/66/EC directive of the European Parliament applies. Due to the contained pollutants, batteries must not be disposed of as household waste. They must be given to collection points designed for that purpose.

In order to comply with the EU directive 2012/19/EU we take our devices back. We either re-use them or give them to a recycling company which disposes of the devices in line with law.

For countries outside the EU, batteries and devices should be disposed of in accordance with your local waste regulations.

If you have any questions, please contact PCE Instruments.



PCE Instruments contact information

Germany

PCE Deutschland GmbH
Im Langel 4
D-59872 Meschede
Deutschland
Tel.: +49 (0) 2903 976 99 0
Fax: +49 (0) 2903 976 99 29
info@pce-instruments.com
www.pce-instruments.com/deutsch

France

PCE Instruments France EURL
23, rue de Strasbourg
67250 SOULTZ-SOUS-FORETS
France
Téléphone: +33 (0) 972 3537 17
Numéro de fax: +33 (0) 972 3537 18
info@pce-france.fr
www.pce-instruments.com/french

Spain

PCE Ibérica S.L.
Calle Mayor, 53
02500 Tobarra (Albacete)
España
Tel. : +34 967 543 548
Fax: +34 967 543 542
info@pce-iberica.es
www.pce-instruments.com/espanol

United States of America

PCE Americas Inc.
711 Commerce Way suite 8
Jupiter / Palm Beach
33458 FL
USA
Tel: +1 (561) 320-9162
Fax: +1 (561) 320-9176
info@pce-americas.com
www.pce-instruments.com/us

United Kingdom

PCE Instruments UK Ltd
Unit 11 Southpoint Business Park
Ensign Way, Southampton
Hampshire
United Kingdom, SO31 4RF
Tel: +44 (0) 2380 98703 0
Fax: +44 (0) 2380 98703 9
info@industrial-needs.com
www.pce-instruments.com/english

Italy

PCE Italia s.r.l.
Via Pesciatina 878 / B-Interno 6
55010 LOC. GRAGNANO
CAPANNORI (LUCCA)
Italia
Telefono: +39 0583 975 114
Fax: +39 0583 974 824
info@pce-italia.it
www.pce-instruments.com/italiano

The Netherlands

PCE Brookhuis B.V.
Institutenweg 15
7521 PH Enschede
Nederland
Telefoon: +31 (0)53 737 01 92
Fax: +31 (0) 53 - 430 36 46
info@pcebenelux.nl
www.pce-instruments.com/dutch

Chile

PCE Instruments Chile S.A.
RUT: 76.154.057-2
Santos Dumont 738, local 4
Comuna de Recoleta, Santiago, Chile
Tel. : +56 2 24053238
Fax: +56 2 2873 3777
info@pce-instruments.cl
www.pce-instruments.com/chile

Hong Kong

PCE Instruments HK Ltd.
Unit J, 21/F., COS Centre
56 Tsun Yip Street
Kwun Tong
Kowloon, Hong Kong
Tel: +852-301-84912
jyi@pce-instruments.com
www.pce-instruments.cn

China

PCE (Beijing) Technology Co.,Ltd
1519 Room, 6 Building
Men Tou Gou Xin Cheng,
Men Tou Gou District
102300 Beijing
China
Tel: +86 (10) 8893 9660
info@pce-instruments.cn
www.pce-instruments.cn

Turkey

PCE Teknik Cihazları Ltd.Şti.
Halkalı Merkez Mah.
Pehlivan Sok. No.6/C
34303 Küçükçekmece - İstanbul
Türkiye
Tel: 0212 471 11 47
Faks: 0212 705 53 93
info@pce-cihazlari.com.tr
www.pce-instruments.com/turkish