



User Manual

PCE-GMM 10 Grain Moisture Meter



User manuals in various languages (français, italiano, español, português, nederlands, türk, polski, русский, 中文) can be found by using our product search on: www.pce-instruments.com

Last change: 11 July 2024
v1.2

Contents

1	Safety notes	1
2	Specifications	2
3	Meter Overview	3
4	Operation Instructions	3
5	Moisture Value Correction	4
6	Maintenance	4
7	Contact	5
8	Disposal	5

1 Safety notes

Please read this manual carefully and completely before you use the device for the first time. The device may only be used by qualified personnel and repaired by PCE Instruments personnel. Damage or injuries caused by non-observance of the manual are excluded from our liability and not covered by our warranty.

- The device must only be used as described in this instruction manual. If used otherwise, this can cause dangerous situations for the user and damage to the meter.
- The instrument may only be used if the environmental conditions (temperature, relative humidity, ...) are within the ranges stated in the technical specifications. Do not expose the device to extreme temperatures, direct sunlight, extreme humidity or moisture.
- Do not expose the device to shocks or strong vibrations.
- The case should only be opened by qualified PCE Instruments personnel.
- Never use the instrument when your hands are wet.
- You must not make any technical changes to the device.
- The appliance should only be cleaned with a damp cloth. Use only pH-neutral cleaner, no abrasives or solvents.
- The device must only be used with accessories from PCE Instruments or equivalent.
- Before each use, inspect the case for visible damage. If any damage is visible, do not use the device.
- Do not use the instrument in explosive atmospheres.
- The measurement range as stated in the specifications must not be exceeded under any circumstances.
- Non-observance of the safety notes can cause damage to the device and injuries to the user.

We do not assume liability for printing errors or any other mistakes in this manual.

We expressly point to our general guarantee terms which can be found in our general terms of business.

2 Specifications

Cereal	Measuring range	Resolution	Accuracy
Wheat	9 ... 38%	0.1%	± 0.5%
Corn	9 ... 39%	0.1%	± 0.5%
Japonica rice	8.5 ... 40%	0.1%	± 0.5%
Indian rice	8.9 ... 30.4%	0.1%	± 0.5%
Soybeans	8.9 ... 33.4%	0.1%	± 0.5%
Rice	10.4 ... 26.4%	0.1%	± 0.5%
Sorghum	8 ... 35%	0.1%	± 0.5%
Rapeseed	6.4 ... 25.4%	0.1%	± 0.5%
Millet	9.4 ... 28.4%	0.1%	± 0.5%
Peanuts	5.4 ... 18.9%	0.1%	± 0.5%
Barley	9.4 ... 26.4%	0.1%	± 0.5%
Sunflower seeds	7.9 ... 24.4%	0.1%	± 0.5%
Coffee beans	10 ... 30%	0.1%	± 0.5%
Cocoa beans	4.5 ... 17%	0.1%	± 0.5%
Parchment Coffee	8.8 ... 40%	0.1%	± 0.5%
Sesame	6 ... 18%	0.1%	± 0.5%
Flaxseed	4.5 ... 18.0%	0.1%	± 0.5%
Almonds	4.5 ... 21.0 %	0.1%	± 0.5%
Cashew	4,5 ... 15,0%	0.1%	± 0.5%
Jute Seed	6.6 ... 32 %	0.1%	± 0.5%
Raspberry Seed	9.5 ... 32 %	0.1%	± 0.5%
Red Bean (small)	12.1 ... 30 %	0.1%	± 0.5%
Repeatability	0.2%		
Adjustment range	± 9.9%		
Sample size	About 65 ml		
Operating temperature range	0 ... 40°C / 32 ... 104°F		
Temperature compensation	Automatically		
Power supply	9V block battery		
Automatic shutdown	After 3 minutes		
Dimensions	160 x 95 x 125 mm		
Weight	823 g		

3 Meter Overview



- 1 Cover
- 2 Measuring Cup
- 3 Display
- 4 Operation Buttons

4 Operation Instructions

1. Press the **power** button to turn the meter on.
2. Press the **set** button; the meter will now display “Select kind” and “Adjust moisture”.
3. Press **set** again to select “Select kind”
4. Use the **+** and **-** buttons to navigate the menu
5. Press **set** to select the desired grain type; the meter will now return to measurement mode.

Important!

6. Fill the measuring cup $\frac{1}{2}$ full with grain. Gently shake the meter to settle the grains. Full the measuring cup to the top.
7. Gently press the cover down during measurement to ensure accurate results. If the grains settle further after pressing the cover down, refill again to the top and measure again.
8. Remove the cover and replace the sample grains with a new sample.
9. Pressing the **set** button after 2 or more measurement will display the average value of the measurement results.

Using the **+** and **-** buttons in measurement mode will adjust the display brightness.
The meter will display “LOW” if the battery runs low.

5 Moisture Value Correction

Depending on the environment, a grain may have varied moisture. This can be adjusted for each grain type individually.

1. Press the **set** button; the meter will now display “Select kind” and “Adjust moisture”.
2. Press **set** again to select “Select kind
3. Use the **+** or **-** button to navigate the menu
4. Press **set** to select the desired grain type; the meter will now return to measurement mode.
5. Press **set** again, but this time select “Adjust moisture”
6. Use the **+** and **-** buttons to adjust the moisture value.
7. Press and hold the **set** button to save the value and return to the measurement mode.

6 Maintenance

- Before use, please place the grains and the meter in the same location and under the same temperature to ensure measurement accuracy.
- Handle the meter with care.
- Ensure the battery is in good condition. Battery leakage can cause damage to the meter.
- Use the provided brush to gently clean the measuring cup after use.

7 Contact

If you have any questions, suggestions or technical problems, please do not hesitate to contact us. You will find the relevant contact information at the end of this user manual.

8 Disposal

For the disposal of batteries in the EU, the 2006/66/EC directive of the European Parliament applies. Due to the contained pollutants, batteries must not be disposed of as household waste. They must be given to collection points designed for that purpose.

In order to comply with the EU directive 2012/19/EU we take our devices back. We either re-use them or give them to a recycling company which disposes of the devices in line with law.

For countries outside the EU, batteries and devices should be disposed of in accordance with your local waste regulations.

If you have any questions, please contact PCE Instruments.



PCE Instruments contact information

Germany

PCE Deutschland GmbH
Im Langel 26
D-59872 Meschede
Deutschland
Tel.: +49 (0) 2903 976 99 0
Fax: +49 (0) 2903 976 99 29
info@pce-instruments.com
www.pce-instruments.com/deutsch

United Kingdom

PCE Instruments UK Ltd
Trafford House
Chester Rd, Old Trafford
Manchester M32 0RS
United Kingdom
Tel: +44 (0) 161 464902 0
Fax: +44 (0) 161 464902 9
info@pce-instruments.co.uk
www.pce-instruments.com/english

The Netherlands

PCE Brookhuis B.V.
Institutenweg 15
7521 PH Enschede
Nederland
Telefoon: +31 (0)53 737 01 92
info@pcebenelux.nl
www.pce-instruments.com/dutch

France

PCE Instruments France EURL
23, rue de Strasbourg
67250 Soultz-Sous-Forets
France
Téléphone: +33 (0) 972 3537 17
Numéro de fax: +33 (0) 972 3537 18
info@pce-france.fr
www.pce-instruments.com/french

Italy

PCE Italia s.r.l.
Via Pesciatina 878 / B-Interno 6
55010 Loc. Gragnano
Capannori (Lucca)
Italia
Telefono: +39 0583 975 114
Fax: +39 0583 974 824
info@pce-italia.it
www.pce-instruments.com/italiano

United States of America

PCE Americas Inc.
1201 Jupiter Park Drive, Suite 8
Jupiter / Palm Beach
33458 FL
USA
Tel: +1 (561) 320-9162
Fax: +1 (561) 320-9176
info@pce-americas.com
www.pce-instruments.com/us

Spain

PCE Ibérica S.L.
Calle Mula, 8
02500 Tobarra (Albacete)
España
Tel. : +34 967 543 548
Fax: +34 967 543 542
info@pce-iberica.es
www.pce-instruments.com/espanol

Turkey

PCE Teknik Cihazları Ltd.Şti.
Halkalı Merkez Mah.
Pehlivan Sok. No.6/C
34303 Küçükçekmece - İstanbul
Türkiye
Tel: 0212 471 11 47
Faks: 0212 705 53 93
info@pce-cihazlari.com.tr
www.pce-instruments.com/turkish

Denmark

PCE Instruments Denmark ApS
Birk Centerpark 40
7400 Herning
Denmark
Tel.: +45 70 30 53 08
kontakt@pce-instruments.com
www.pce-instruments.com/dansk