



User Manual

PCE-VTS 50, PCE-HTS 50 Force Test Stand



User manuals in various languages (français, italiano, español, português, nederlands, türk, polski, русский, 中文) can be found by using our product search on: www.pce-instruments.com

Last change: 6 March 2023
v1.0



Contents

1	Safety notes.....	1
2	Specifications.....	2
3	Scope of delivery	2
4	Instrument description and dimensions.....	3
5	Display description	4
6	User interface	5
7	Automatic and manual mode.....	6
8	Set travel distance	6
9	Establish connection with a force gauge	6
10	Contact.....	6
11	Disposal	6

1 Safety notes

Please read this manual carefully and completely before you use the device for the first time. The device may only be used by qualified personnel and repaired by PCE Instruments personnel. Damage or injuries caused by non-observance of the manual are excluded from our liability and not covered by our warranty.

- The device must only be used as described in this instruction manual. If used otherwise, this can cause dangerous situations for the user and damage to the meter.
- The instrument may only be used if the environmental conditions (temperature, relative humidity, ...) are within the ranges stated in the technical specifications. Do not expose the device to extreme temperatures, direct sunlight, extreme humidity or moisture.
- Do not expose the device to shocks or strong vibrations.
- The case should only be opened by qualified PCE Instruments personnel.
- Never use the instrument when your hands are wet.
- You must not make any technical changes to the device.
- The appliance should only be cleaned with a damp cloth. Use only pH-neutral cleaner, no abrasives or solvents.
- The device must only be used with accessories from PCE Instruments or equivalent.
- Before each use, inspect the case for visible damage. If any damage is visible, do not use the device.
- Do not use the instrument in explosive atmospheres.
- The measurement range as stated in the specifications must not be exceeded under any circumstances.
- Non-observance of the safety notes can cause damage to the device and injuries to the user.
- It is recommended to wear eye protection during a compression or tensile test due to possible splinters from torn samples.

We do not assume liability for printing errors or any other mistakes in this manual.

We expressly point to our general guarantee terms which can be found in our general terms of business.

2 Specifications


Force range	500 N / 50 kg / 110 lb
Travel distance	270 mm / 10.6"
Resolution of distance display	0.02 mm
Speed	1 ... 500 mm/min
Resolution	1 mm/min
Speed accuracy	2 %
Power supply	220 ... 240 V AC, 1.5 A
Fuse	2 A
Environmental conditions	20 °C ±10 °C, 15 ... 80 % RH, non-condensing
Dimensions	45 x 26 x 68 cm / 17.7 x 10.2 x 26.7"
Weight	35 kg / 77 lb

3 Scope of delivery


- 1 x motorised tension-compression test stand PCE-VTS 50 or PCE-HTS 50
- 1 x pulse cable for PCE-PFG series
- 4 x rubber foot
- 2 x Allen key
- 1 x power cable
- 1 x user manual

4 Instrument description and dimensions

PCE-VTS 50

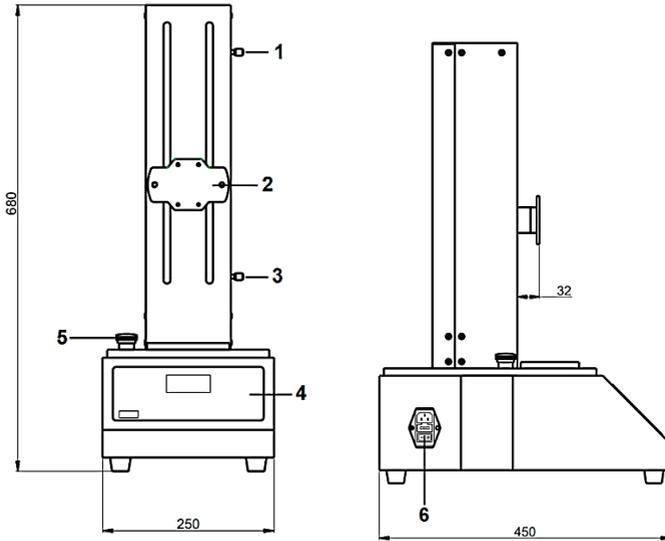


PCE-VTS 50

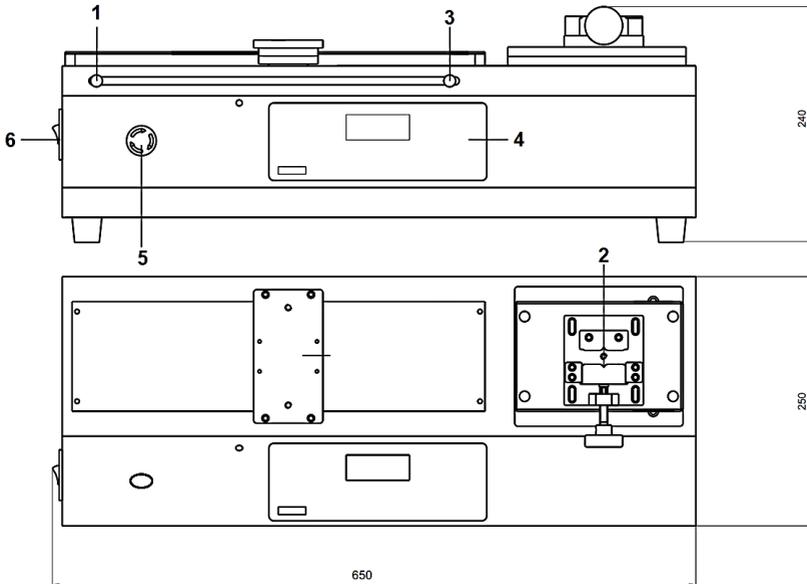


No.	Description
1	Upper limit (limit switch)
2	Travel distance
3	Lower limit (limit switch)
4	User interface
5	Emergency switch
6	Cold-device connection for power supply

5 Display description

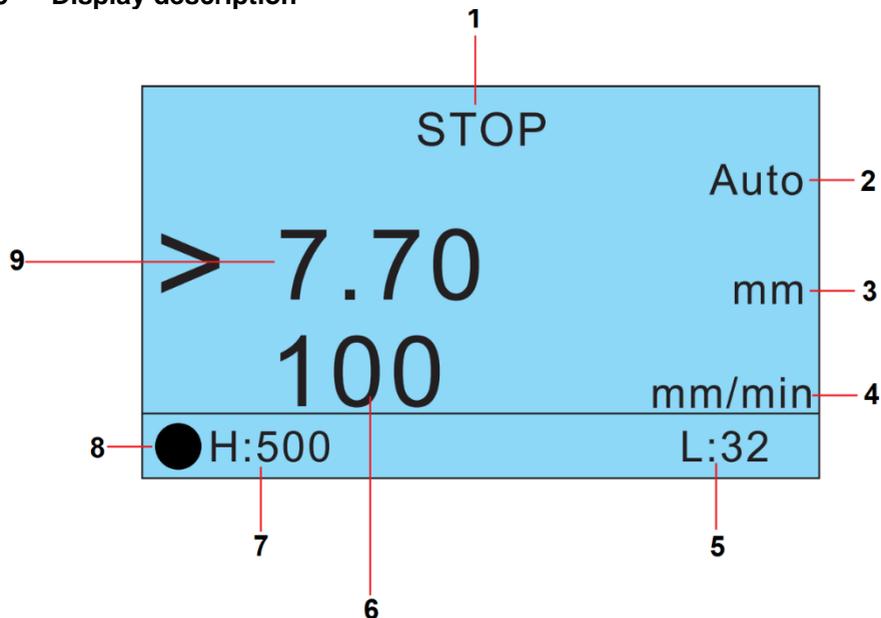

No.	Description
1	Status
2	Measuring mode
3	Unit
4	Unit for travel speed
5	Lowest set speed
6	Set speed
7	Highest set speed
8	Indicator whether lowest or highest speed has been selected
9	Travel distance

6 User interface

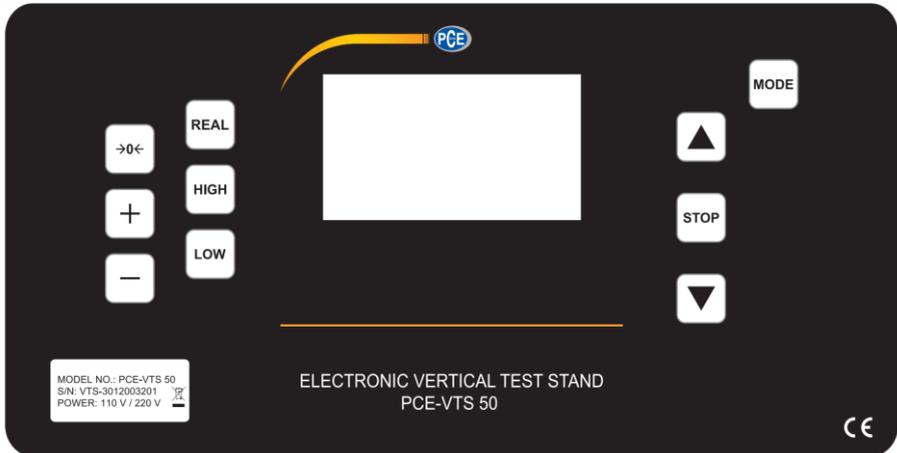

Key	Description
MODE	Switch between manual and automatic mode
STOP	Stop automatic mode
▲	Start upward travel (PCE-VTS 50) or travel to the left (PCE-HTS 50)
▼	Start downward travel (PCE-VTS 50) or travel to the right (PCE-HTS 50)
LOW	Switch to low speed (1 ... 99 mm/min)
REAL	Switch to full speed range
HIGH	Switch to high speed (100 ... 500 mm/min)
>0<	Reset displayed travel distance
+	Increase speed
-	Reduce speed

7 Automatic and manual mode

In manual mode, the force gauge moves by pressing the arrow key for the direction of travel. In automatic mode, this is initiated via a keystroke. The force gauge stops as soon as it receives a stop command, for example by pressing a key or from the limit switch.

8 Set travel distance

For the travel distance, both the upper and the lower limit can be set individually. When the slide reaches the limit, the motor stops directly.

9 Establish connection with a force gauge

To establish a connection with a force gauge of the PCE-PGF series, use the pulse cable included in the delivery. As soon as a pulse is sent from the force gauge, the force test stand stops. All settings for this can be found in the PCE-PFG series manual.

10 Contact

If you have any questions, suggestions or technical problems, please do not hesitate to contact us. You will find the relevant contact information at the end of this user manual.

11 Disposal

For the disposal of batteries in the EU, the 2006/66/EC directive of the European Parliament applies. Due to the contained pollutants, batteries must not be disposed of as household waste. They must be given to collection points designed for that purpose.

In order to comply with the EU directive 2012/19/EU we take our devices back. We either re-use them or give them to a recycling company which disposes of the devices in line with law.

For countries outside the EU, batteries and devices should be disposed of in accordance with your local waste regulations.

If you have any questions, please contact PCE Instruments.



PCE Instruments contact information

Germany

PCE Deutschland GmbH
Im Langel 26
D-59872 Meschede
Deutschland
Tel.: +49 (0) 2903 976 99 0
Fax: +49 (0) 2903 976 99 29
info@pce-instruments.com
www.pce-instruments.com/deutsch

United Kingdom

PCE Instruments UK Ltd
Unit 11 Southpoint Business Park
Ensign Way, Southampton
Hampshire
United Kingdom, SO31 4RF
Tel: +44 (0) 2380 98703 0
Fax: +44 (0) 2380 98703 9
info@pce-instruments.co.uk
www.pce-instruments.com/english

The Netherlands

PCE Brookhuis B.V.
Institutenweg 15
7521 PH Enschede
Nederland
Telefoon: +31 (0)53 737 01 92
info@pcebenelux.nl
www.pce-instruments.com/dutch

France

PCE Instruments France EURL
23, rue de Strasbourg
67250 Soultz-Sous-Forêts
France
Téléphone: +33 (0) 972 3537 17
Numéro de fax: +33 (0) 972 3537 18
info@pce-france.fr
www.pce-instruments.com/french

Italy

PCE Italia s.r.l.
Via Pesciatina 878 / B-Interno 6
55010 Loc. Gragnano
Capannori (Lucca)
Italia
Telefono: +39 0583 975 114
Fax: +39 0583 974 824
info@pce-italia.it
www.pce-instruments.com/italiano

United States of America

PCE Americas Inc.
1201 Jupiter Park Drive, Suite 8
Jupiter / Palm Beach
33458 FL
USA
Tel: +1 (561) 320-9162
Fax: +1 (561) 320-9176
info@pce-americas.com
www.pce-instruments.com/us

Spain

PCE Ibérica S.L.
Calle Mayor, 53
02500 Tobarra (Albacete)
España
Tel. : +34 967 543 548
Fax: +34 967 543 542
info@pce-iberica.es
www.pce-instruments.com/espanol

Turkey

PCE Teknik Cihazları Ltd.Şti.
Halkalı Merkez Mah.
Pehlivan Sok. No.6/C
34303 Küçükçekmece - İstanbul
Türkiye
Tel: 0212 471 11 47
Faks: 0212 705 53 93
info@pce-cihazlari.com.tr
www.pce-instruments.com/turkish

Denmark

PCE Instruments Denmark ApS
Birk Centerpark 40
7400 Herning
Denmark
Tel.: +45 70 30 53 08
kontakt@pce-instruments.com
www.pce-instruments.com/dansk