 

5.2 Battery Replacement

When the battery voltage drops below the operating voltage, the mark  appears and flashes. If it appears, the battery should be replaced with a new one.

NOTE: "This instrument doesn't have ATEX protection, so it should not be used in potentially explosive atmospheres (powder, flammable gases)."