

PCE Instruments UK Ltd.
Unit 11
Southpoint Business Park
Ensign way
Hampshire / Southampton
United Kingdom, SO31 4RF
From outside UK: +44
Tel: (0) 2380 98703 0
Fax: (0) 2380 98703 9
info@pce-instruments.co.uk

www.pce-instruments.com/english www.pce-instruments.com

Pen type, separate electrode

SOIL PH METER

Model: PCE-PH20S



Your purchase of this SOIL PH METER marks a step forward for you into the field of precision measurement. Although this METER is a complex and delicate instrument, its durable structure will allow many years of use if proper operating techniques developed. Please read following the instructions carefully and always keep this within manual easy reach.

OPERATION MANUAL

TABLE OF CONTENTS

1.	FEATURES	. 1
2.	SPECIFICATIONS	. 1
3.	FRONT PANEL DESCRIPTIONS. 3-1 Display. 3-2 Power button (▲ button). 3-3 Hold button 3-4 Display reverse button (▼ button). 3-5 pH electrode BNC socket. 3-6 BNC protection cover. 3-7 Battery compartment/Cover. 3-8 pH electrode handle. 3-9 pH electrode sensing head. 3-10 pH electrode BNC plug. 3-11 pH electrode protection bottle.	3 3 3 3 3 3 3 3
4.	pH CALIBRATING PROCEDURE	.4 .4
5.	MEASURING PROCEDURE	. 5
6.	REPLACEMENT OF BATTERY	. 5
7.	OPTIONAL ACCESSORIES	. 6

1. FEATURES

- * Complete set with pen pH meter, soil pH electrode, pH 4.0 /pH 7.0 standard buffer solution.
- * Spear Tip pH electrode (included), ideal for penetration pH measurement into soil, meats, cheese and other type of measurements requiring sample penetration. The electrode features a very durable glass measuring spear packaged in a rugged virtually unbreakable epoxy body.
- * Separate soil pH electrode, easy for general purpose usage and remote measurement.
- * Auto calibration for pH 4, pH 7 or pH 10.
- * Build in reverse display button.
- * Data hold.
- * Auto power off.
- * Compact size, light weight.
- * Optional carrying case.
- * Water resistance on the front panel.
- * Application : Agriculture, Gardening, Food industrial, Education, School, Colleges, Laboratory, Industrial and Quality control.

2. SPECIFICATIONS

2-1 Meter

Display	LCD, size: 20 mm x 28 mm.		
	* User can reverse the display direction		
	by push button.		
Measurement	0 to 14 pH x 0.01 pH		
Range			
Resolution	0.01 pH		


Accuracy	± 0.07 pH(pH5 to pH 9)			
	± 0.1 pH(pH4 to pH4.9, pH9.1 to pH10)			
	± 0.2 pH(pH1 to pH3.9, pH10.1 to pH13)			
	* 23± 5℃			
	* After calibration.			
Input	10^12 ohms.			
Impedance				
Temperature	Not necessary to make adjustment.			
Compensation				
Sampling	Approx. 0.8 second.			
Time				
Hold Function	To freeze the display reading value.			
Calibration	Auto calibration,			
method	pH 7, pH 4 (or pH 10)			
pH electrode	BNC connector.			
connector				
Operating	0 to 50 $^{\circ}\mathrm{C}$ (32 to 122 $^{\circ}\mathrm{F}$)			
Temperature				
Operating	Less than 80% RH.			
Humidity				
Power Supply	DC 1.5V battery (UM-4/AAA) x 4 PCs.			
Power	Approx. 4.8 mA.			
Consumption				
Dimension	Meter: 180 x 40 x 32 mm (7.1 x 1.6 x 1.3 inch).			
	Electrode: Body size: 12 mm dia. x 160 mm.			
	Electrode cable length: approx 1000 mm.			
Weight	220 g/0.48 LB (included electrode).			

Standard	Instruction Manual	1 PC.
Accessories	ccessories Soil pH electrode	
	pH 4.0 buffer solution, PH-04A	1 PC.
	pH 7.0 buffer solution, PH-07A	1 PC.

2-1 Soil pH Electrode (included)

1 to 13 pH (typical 0 to 14 pH).			
5 to 60 $^{\circ}\mathrm{C}$ (41 to 140 $^{\circ}\mathrm{F}$).			
Combination type.			
Ag/AgCI, Double Junction.			
7± 1 pH.			
0.05 pH.			
\geq 2 minutes.			
Ероху.			
BNC.			
With protection bottle (soaker			
bottle) on the electrode head.			
68 g (including cable & socket).			
Body length - 160 mm.			
Body Dia 12 mm.			
Cable length - 1000 mm.			

3. FRONT PANEL DESCRIPTION

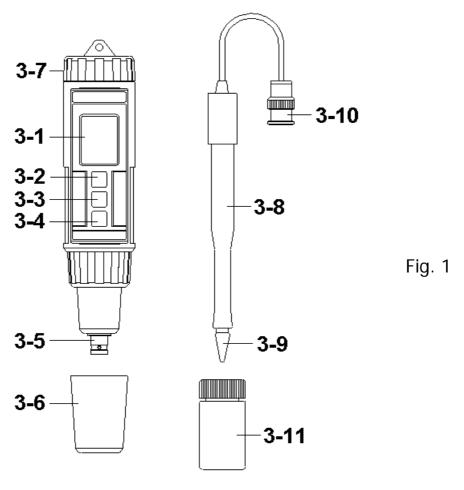

- 3-1 Display
- 3-2 Power button (▲ button)
- 3-3 Hold button
- 3-4 Display reverse button (▼ button)
- 3-5 pH electrode BNC socket
- 3-6 BNC protection cover
- 3-7 Battery compartment/Cover
- 3-8 pH electrode handle
- 3-9 pH electrode sensing head
- 3-10 pH electrode BNC plug
- 3-11 pH electrode protection bottle

4. pH CALIBRATING PROCEDURE

4-1 Calibrating Consideration

The pH meter already calibrated by mV signal that simulated from the ideal pH ELECTRODE mV output (base on 25 $^{\circ}$ C environment). However due to (a) An ideal electrode will produce 0 mV at pH 7.00, but most electrodes are slightly off. (b) The measuring environment temperature may not near 25 $^{\circ}$ C (15 to 35 $^{\circ}$ C). If intend to keep instrument combined electrode within high accuracy, it is necessary to make the following calibration procedures (4-3).


4-2 Requiring Equipment for Calibration

- 1) Combination soil pH electrode (included).
- 2) Buffer solutions: pH 7.00 buffer solution (included). pH 4.00 buffer solution (included).

4-3 Calibration procedures

pH 7 calibration

- 1) Connect the pH electrode plug (3-10, Fig. 1) to the BNC socket (3-5, Fig. 1) and place electrode into pH 7.00 buffer solution.
- 2) Power on the instrument by pressing the "Power button "(3-2, Fig. 1).
- 3) Press the "Hold button " (3-3, Fig. 1) once. the display will show the "HOLD "symbol. Press the "▼ button " (3-3, Fig. 1) once, the display will show following screen in sequence.

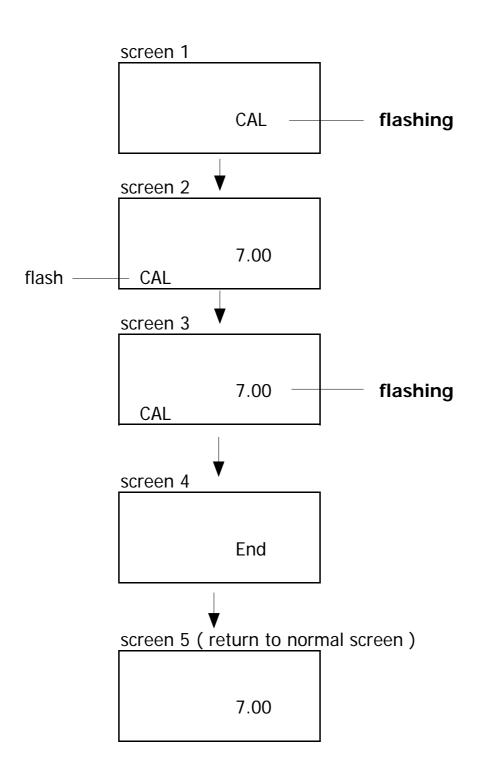

pH 4 calibration

- 1) Rinse the electrode in distilled water. Place electrode into buffer pH 4.00 solution.
- 2) All the calibration procedures are same as the above pH calibration, except :
 - a. Change the buffer solution to pH 4.00.
 - **b.** The calibration screen value will change to 7.00 instead of 4.00


Remark:

- * Except calibrate pH 7, pH 4, meter also can calibrate pH 10.
- * The calibration procedures should start from the pH 7 at first, then pH 4 (or pH 10).
- * During the calibration, the circuit will sensing solution value automatically. If the buffer solution value already beyond $7\pm$ 1 pH. $4\pm$ 1 pH, $10\pm$ 1 pH, the LCD will show " Err ".
- * When the LCD show the screen 2, it allow the user to adjust another calibration value precisely (for example 7.01, 6.99...) by pressing the " ▲ button " (3-2, Fig. 1), " ▼ button " (3-4, Fig. 1)'
- * Rinse the electrode in distilled water before change the buffer solution.
- * Repeat above pH, pH calibration procedures two times at least.
- * After calibration, the "Electrode sensing head " (3-9, Fig. 1) should insert into the "Protection bottle " (3-11, Fig. 1).

5. MEASURING PROCEDURE

After the meter along the pH electrode is calibrated (section 4-3), the unit is ready for measuring.

- 1) Connect the pH electrode plug (3-10, Fig. 1) to the BNC socket (3-5, Fig. 1) and place electrode into the measured solution.
- 2) Power on the meter by pressing the "Power button" (3-2, Fig. 1).
- 3) Place the electrode into the measured soil or other type penetration material (such as cheese, meats...) or solution, then the instrument will display the pH value.

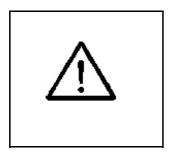

- * Electrode (attached) is the rough and durable penetration electrode. However user should operate the electrode very carefully.
- * The electrode is the consumer accessory, after the electrode is used, if the damage of the Electrode Sensing Head (Spear Tip Head), it is without warranty.
- * After make the measurement, please rinse the electrode in distilled water.
- * After calibration, the "Electrode sensing head" (3-9, Fig. 1) should insert into the "Protection bottle" (3-11, Fig. 1).

Data hold

During the measurement, press the "Hold button" (3-3, Fig. 1) once will hold the measured value & the LCD will display a "HOLD" symbol.

* Press the " Hold Button " once again will release the data hold function.

Display reverse

During the measurement, press the "Display reverse button "(3-4, Fig. 1) once will reverse the display direction for the user convenience.

* Press the "Display reverse button "once again will return to the normal display.

Auto power off

The meter is built the "Auto power shut off " function to save battery life. If any function buttons are not pushed within 10 minutes, the power will be off automatically.

6. REPLACEMENT OF BATTERY

- 1) When the LCD display show " , It is necessary to replace the battery. However, in-spec measurement may still be made for several hours after Low Battery Indicator appears before the instruments instrument become inaccurate.
- 2) To replace the battery, rotate and remove the "Battery Cover" (3-7, Fig. 1), take out the old batteries, install new batteries:

DC 1.5V battery (UM-4/AAA) x 4 PCs.

- 3) When install the batteries, should make attention the battery polarity.
- 4) After install the batteries, reinstall the battery cover again.