

# Series PCE-DPD . Option NB

Option NB for Series PCE-DPD of panel meters, replaces the standard front panel programming keypad by a neutral front label.

- Option NB prevents the operator from accessing the front keypad for programming or reconfiguration.
- Please remember that all meters from Series PCE-DPD provide a configurable 'password' function that can also block operator access to the programming menu.

To access the keypad for programming or reconfiguration, the meter must be moved out from the panel and the front filter removed. If the instrument is placed on its panel mount location, it is not possible to access the programming keypad.

- Option NB must be factory installed, so internal key buttons are reduced 2 mm on its height.




With option NB



With standard keypad

## How to access the internal key pad

1. If the instrument is panel mounted, uninstall from the panel
2. Remove the front filter  
to open the housing, use a flat screwdriver to free the fixation clips, in the following order : D C B A.
3. Configure the instrument  
use buttons 'LE', 'UP' and 'SQ', to configure the instrument as indicated in the user's manual provided with the instrument
4. To close again the housing, place the front filter in front of the housing and :
  - place corner X
  - insert clip A
  - insert clip B
  - insert clip C
  - insert clip D

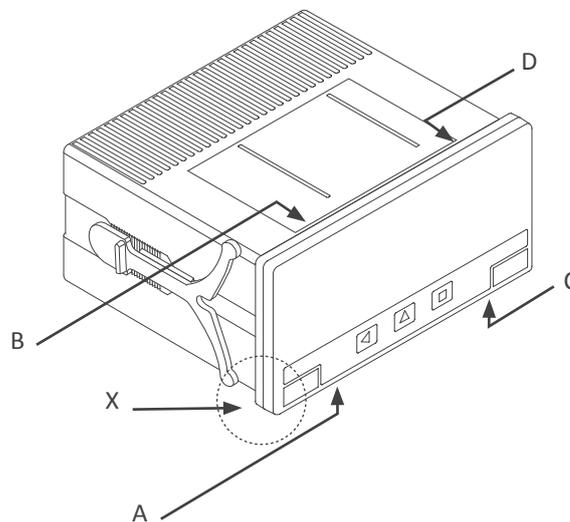

Risk of electrical shock. Removing the front filter must be done by qualified personnel only. Parts under dangerous voltage may be accessible after removing the front filter