

PCE Americas Inc.
711 Commerce Way
Suite 8
Jupiter
FL-33458
USA
From outside US: +1
Tel: (561) 320-9162
Fax: (561) 320-9176
info@pce-americas.com

PCE Instruments UK Ltd.
Units 12/13
Southpoint Business Park
Ensign way
Hampshire / Southampton
United Kingdom, SO31 4RF
From outside UK: +44
Tel: (0) 2380 98703 0
Fax: (0) 2380 98703 9
info@pce-instruments.com

www.pce-instruments.com/english
www.pce-instruments.com

Manual Digital Thermometer PCE-889B



Version 1.0
Date of creation: 08.01.2016
Date of last change: 14.03.2016

Contents

1	Introduction	3
2	Safety notes	3
3	Specifications	3
4	System description	4
5	Background information.....	5
6	Button functions / Instructions	6
7	Disposal	8
8	Contact.....	8
8.1	PCE Instruments UK	8
8.2	PCE Americas	8

1 Introduction

Thank you for purchasing an infrared thermometer PCE-889B from PCE Instruments.

2 Safety notes

Please read this manual carefully and completely before you use the device for the first time. The device may only be used by qualified personnel and repaired by PCE Instruments personnel. There is no warranty of damage or injuries caused by non-observance of the manual.

- The device may only be used in the approved temperature range.
- The case should only be opened by qualified personnel of PCE Instruments.
- Only use PCE replacement parts or appropriate equivalent.
- The instrument should never be placed with the user interface facing an object (e.g. keyboard side on a table).
- You must not make any technical changes to the device.
- The appliance should periodically be cleaned with a dry cloth / use only pH-neutral cleaner, no abrasives or solvents.
- Be extremely careful when the laser beam is turned on.
- Do not let the beam enter your eye, another person's eye or the eye of an animal.
- Be careful not to let the beam strike your eye via a reflective surface.
- Keep the instrument away from explosive gases.
- It is not recommended to measure shiny or polished metal surfaces (stainless steel, aluminum, etc.) with this thermometer, see information on emissivity.
- The device cannot measure through transparent surfaces such as glass. It will measure the surface temperature of the glass instead.
- Steam, dust, smoke, etc., can obstruct the meter's optics and thus affect measurement accuracy.

This user's handbook is published by PCE Instruments without any guarantee.

We expressly point to our general guarantee terms which can be found in our general terms of business.

If you have any questions please contact PCE Instruments.


3 Specifications

Measurement ranges	-50 ... +1000 °C
Resolution	0.1 °C
Accuracy	±1 %
Response time	<150 ms
Distance:spot ratio	30:1
Adjustable emissivity, depending on material	0.1 ... 1.0
Spectral range	8 ... 14 µm
Visible laser beam for targeting	dual laser beam (class 2)
Dimensions	146 x 104 x 43 mm
Weight	163 g
Temperature units	°C / °F
Display functions	HOLD function, Auto Power Off, MAX value indication
Backlight	✓
Indication when temperature is exceeded	✓
Continuous measurement	✓
Alarm output	✓
Power supply	9 V battery

4 System description


Front panel

- ① IR sensor
- ② LC display / laser pointer beam
- ③ Up button
- ④ Down button
- ⑤ Mode button
- ⑥ Measurement trigger
- ⑦ Battery compartment cover
- ⑧ Handle

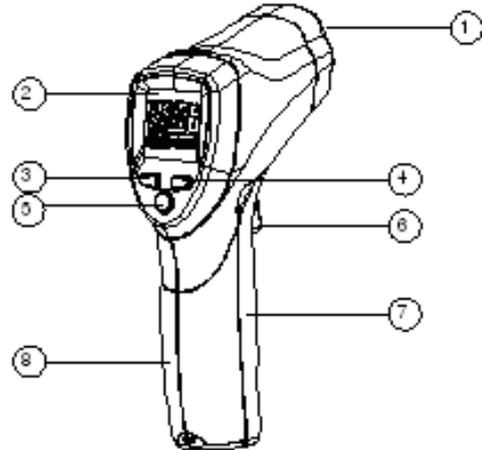


Display

- ① Data hold
- ② Laser "on" symbol
- ③ Lock symbol
- ④ High alarm and low alarm symbols
- ⑤ °C / °F symbol
- ⑥ Low battery indicator
- ⑦ Emissivity symbol and value
- ⑧ MAX temperature value
- ⑨ MAX temperature symbol
- ⑩ Current temperature value

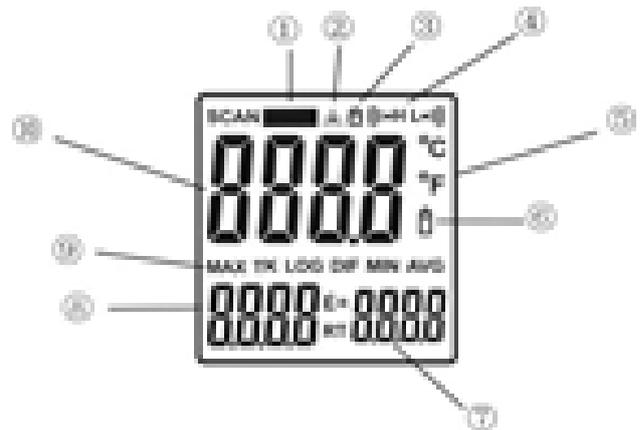

Buttons


- ① Up button (for EMS, HAL, LAL)
- ② Down button (for EMS, HAL, LAL)
- ③ MODE button (for navigation through the different modes)

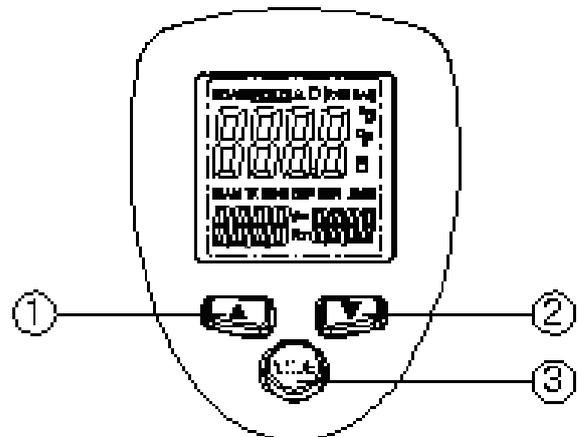

5 Background information

Distance to spot size ratio

As you can see below, the spot size (S) of the area measured by the unit becomes larger as the distance (D) from the object increases. In both cases illustrated below, the focal point is 914 mm (36"). The spot sizes indicate 90 % encircled energy.

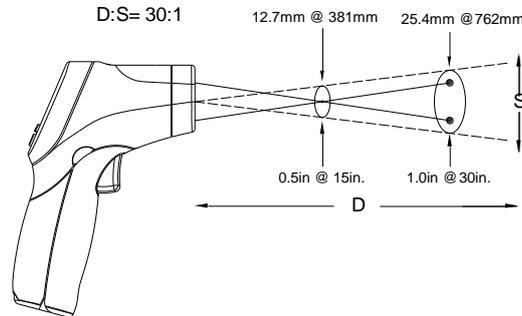

Field of view

Make sure that the target is larger than the spot size. The smaller the target, the closer you should be to it. When accuracy is critical, make sure the target is at least twice as large as the spot size.

Emissivity

Emissivity is a term used to describe the energy-emitting characteristics of materials. Most (90 % of typical applications) organic materials and painted or oxidized surfaces have an emissivity of 0.95 (pre-set in the device). Inaccurate readings will result from measuring shiny or polished metal surfaces. To compensate, cover the surface to be measured with masking tape or a thin layer of black paint. Allow time for the tape to reach the same temperature as the material underneath it. Measure the temperature of the tape or painted surface.

Emissivity values

Material	Thermal emissivity	Material	Thermal emissivity
Asphalt	0.90 to 0.98	Cloth (black)	0.98
Concrete	0.94	Human skin	0.98
Cement	0.96	Leather	0.75 to 0.80
Sand	0.90	Charcoal (powder)	0.96
Soil	0.92 to 0.96	Lacquer	0.80 to 0.95
Water	0.92 to 0.96	Lacquer (matt)	0.97
Ice	0.96 to 0.98	Rubber (black)	0.94
Snow	0.83	Plastics	0.85 to 0.95
Glass	0.90 to 0.95	Timber	0.90
Ceramics	0.90 to 0.94	Paper	0.70 to 0.94
Marble	0.94	Chromium oxides	0.81
Plaster	0.80 to 0.90	Copper oxides	0.78
Mortar	0.89 to 0.91	Iron oxides	0.78 to 0.82
Brick	0.93 to 0.96	Textiles	0.90

6 Button functions / Instructions

°C / °F switch

Using this switch, you can select °C or °F as your unit of measurement. You can find the switch behind the battery compartment cover, above the batteries.

Settings and selection within the different modes using the up / down buttons


During measurement, the up and down buttons can be used to adjust the emissivity.

When in HOLD mode, the up key can be used to turn the laser on or off and the down key is used to turn the backlight on or off.

MODE button

By means of the MODE button, you can navigate through the mode cycle where you can make several settings. To set, for example, the values for the High Alarm (HAL), Low Alarm (LAL) and Emissivity (EMS), press the MODE button until the appropriate code appears in the display, press the up and down buttons to adjust the desired values.

The mode structure is as follows:

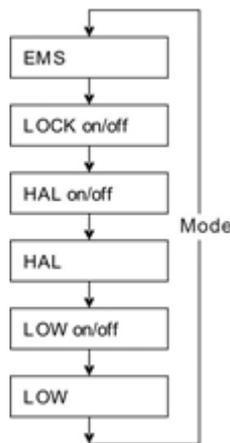

Emissivity (EMS) adjustment

The Emissivity(EMS) is digitally adjustable from 0.10 to 1.0, by means of the up and down buttons..

LOCK on/off

Lock mode is particularly useful for continuous monitoring of temperatures. Press the up / down buttons to turn this mode on or off. Press the measurement trigger to confirm lock mode. The IR thermometer will continuously display the measured temperature until the measurement trigger is applied again. In lock mode, press the up / down buttons to adjust the emissivity.


HAL / LOW on/off

Press the up or down button to turn the high / low alarm on or off. Pull the measurement trigger to confirm.

HAL / LOW

The high / low alarm can be set to a value between -50 and 1000 °C (-58 ... 1832 °F).

Selection of measurement unit

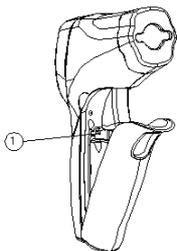

Select the desired temperature unit (°C or °F) using the °C/°F switch ① the location of which can be seen in the picture.

Measurement

- ① Hold the meter by its handle and point the IR sensor towards the surface to be measured.
- ② Pull and hold the trigger to turn the meter on and start the measurement. The display will light up if the battery voltage is sufficient. Replace the battery if the display does not light up.
- ③ Release the trigger and the HOLD icon will appear in the LCD indicating that the reading is being held. In HOLD status, press the UP button to turn the laser on or off. Press the DOWN button to turn the backlight on or off.
- ④ The meter will automatically power off after approximately 7 seconds after the trigger is released (unless the device is locked to stay on).

Note: The meter automatically compensates for deviations in the ambient temperature. Please bear in mind that it will take up to 30 minutes to adapt to a new ambient temperature. When you want to measure two very different temperatures, please allow some time (several minutes) between the low temperature and the high-temperature measurement.

Hot spot location

To find a hot spot, aim the thermometer outside the area of interest, then scan across with an up and down motion until you locate the hot spot.

Battery replacement

- ① When the remaining battery voltage is not sufficient, the LCD will display “” which means that replacement by a new 9 V battery is required.
- ② Open the battery compartment cover, then remove the battery and replace it by a new 9 V battery. Re-attach the battery compartment cover.

7 Disposal

For the disposal of batteries, the 2006/66/EC directive of the European Parliament applies. Due to the contained pollutants, batteries must not be disposed of as household waste. They must be given to collection points designed for that purpose.

In order to comply with the EU directive 2012/19/EU we take our devices back. We either re-use them or give them to a recycling company which disposes of the devices in line with law.



8 Contact

If you have any questions about our range of products or measuring instruments please contact PCE Instruments.

8.1 PCE Instruments UK

By post:

PCE Instruments UK Ltd.
Units 12/13 Southpoint Business Park
Ensign Way, Southampton
Hampshire

United Kingdom, SO31 4RF

By phone:

02380 987 035

8.2 PCE Americas

By post:

PCE Americas Inc.
711 Commerce Way
Suite 8
Jupiter
33458 FL
USA

By phone:

561 320 9162