


# Shipping Scale PCE-SW 1500N

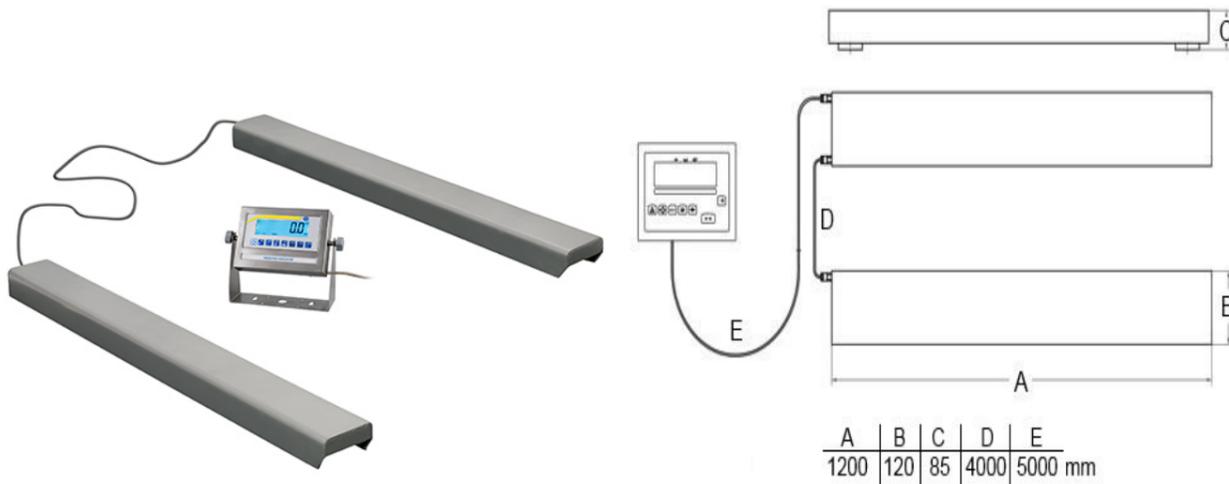

## PCE-SW 1500N Shipping Scale

**Portable adjustable industrial pallet scale with 500 kg / 3306 lb / 1.65 T weighing capacity**

PCE-SW 1500N is a portable battery-powered industrial floor scale or pallet scale featuring two heavy-duty parallel weighing beams made of lacquered steel that can be positioned up to 4 m / 13 ft apart. Thus, the adjustable width accommodates multiple pallet, box and container sizes. In addition, the scale's stainless-steel-encased display can be placed up to 5 m / 16 ft away from the weighing beams, allowing for wall mounting.

- ▶ Bi-directional RS-232 interface for PC or printer connection
- ▶ Multiple TARE for whole weighing range
- ▶ Threshold, sum-up and counting functions
- ▶ 6V rechargeable battery inside display
- ▶ Ingress protection rating: IP 54
- ▶ Ideal for use in warehouse, storage facility, shipping, receiving, loading dock, logistical, supply chain, retail, inventory and stock room applications
- ▶ Software, USB to RS-232 adapter and ISO calibration certificate sold separately - see accessories for details

## Specifications

Weighing range	1500 kg / 3306 lb (=1.65 T)
Resolution	0.5 kg
Accuracy	±2 kg
Tare range	Multiple tare across entire weighing range
Display	LCD with 25 mm / 1" digit height
Cable length to display	ca. 5 m / 16 ft
Interface	Bi-directional RS-232
Calibration	Multi-point calibration possible
Power supply	6V battery installed in the display (BAT-6V-4.5Ah)
Housing	Scale: painted steel / Display: stainless steel
Protection	IP 54
Environment	0 ... +40 °C / +32 ... +104 °F / 10 ... 80% r.H.
Weight	ca. 55 kg / 121.3 lb

## More information

Manual



More product info



Similar products



Subject to change