

## Technical Weightbridge PCE-EP Serie

### Pallet Scale PCE-EP 1500


**Mobile Pallet Scale with 3 ranges,  
weight range up to 1.500 kg**

This Pallet Scale PCE-EP 1500 allows you load directly in the ramp in no time at all. This model of Pallet Scale is the ideal solution for fast and precise mobile weighing in industrial and warehousing applications, in shipping and receiving applications and in inventory control. Now, you don't need to move with big efforts the pallet up to the scale. You only have to bring near the scale the merchandise to weigh, and you will be able to have a good control of the process. The Pallet Scale is transported without problems. In the front view you have a handle to elevate it and in the sides of the scale, you have some wheels. The display has been mounted in the back part of the Pallet Scale (ideal for its transport), nevertheless you can remove it and place it where you want.

- Three ranges for high accuracy
- Accuracy  $\pm 0,05$  % of current value
- Large display 25 mm removable
- Automatic calculation of the tare, manual insert of tare, adder function
- Steel lacquering housing (it can be carried)
- Battery supply which allows an universal use
- Wheels and handle for a good transport
- Adjustable leveling foot
- Auto power off for battery protection



## Dimensiones

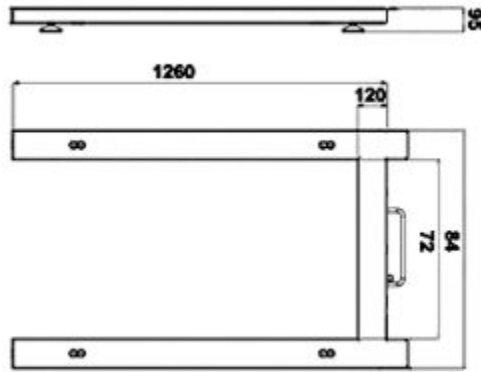

## Technical Specifications

Weight range	0 ... 1500 kg
Readability	500 g
Reproducibility	500 g
Tare range	in the full range
Response time	<4 s
Display	LCD 25 mm easy to read, high contrast with 4 keys removable with 4 m cable length

Units	kg
min. weight	10 kg
máx. weight	150 %
Calibration	automatic (Through an external weight)
Operating temperature	-10 ... +40 °C
Housing	metal (enameling)
Power supply	230 V / 50 Hz (via 12 V Net adaptor, included) or 6 V internal rechargeable battery (included)
Protection	IP 54
Weight	70 kg

## Delivery contents

1x Pallet Scale PCE-EP 1500, 1x display (3 m cable), 1x mains adapter 230 V - 12 V, 1x support and user's manual.